

ショキニー[®]1キロ粒剤 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

こまきちゃん(クボタ)調整ダイヤルの目安

※ 網掛けで示した数値は、高速運転の際に、CS-10では目盛8以上、CS-20、30では目盛9以上で吐出量が飽和するため、撒布できないことがあります。

CS-10

株間 (cm)	条数と横送り回数(回)												PTO検出(POP)			
	4条植え			5条植え			6条植え			8条植え			10条 植え	4条	5条	6条
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回				
12	1.1	1.5	2.1	1.5	2.0	2.7	1.9	2.5	3.3	2.7	3.4	4.6	3.7	1.3	1.7	2.2
13	1.2	1.7	2.3	1.7	2.2	2.9	2.1	2.7	3.6	2.8	3.7	5.0	4.0	1.4	1.9	2.4
14	1.4	1.8	2.5	1.8	2.4	3.2	2.3	2.9	3.9	3.1	4.0	5.4	4.4	1.6	2.1	2.6
16	1.6	2.2	2.8	2.2	2.8	3.7	2.7	3.4	4.6	3.6	4.7	6.2	5.2	1.9	2.5	3.0
18	1.9	2.5	3.3	2.5	3.1	4.2	3.0	3.9	5.2	4.2	5.4	7.0	5.7	2.2	2.8	3.4
21	2.3	2.9	3.9	2.9	3.7	5.0	3.6	4.6	6.1	5.0	6.2	8.3	6.8	2.6	3.3	4.1
24	2.7	3.4	4.6	3.4	4.4	5.8	4.2	5.4	7.0	5.7	7.2	9.6	7.9	3.0	3.9	4.8

CS-20

株間 (cm)	条数と横送り回数(回)												PTO検出(POP)			
	4条植え			5条植え			6条植え			8条植え			10条 植え	4条	5条	6条
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回				
12	1.0	1.3	1.8	1.3	1.7	2.2	1.6	2.1	2.7	2.2	2.8	3.6	3.1	1.2	1.5	1.8
13	1.1	1.5	1.9	1.5	1.9	2.4	1.8	2.2	2.9	2.4	2.9	3.9	3.3	1.3	1.7	2.0
14	1.2	1.6	2.1	1.6	2.0	2.6	1.9	2.4	3.1	2.6	3.2	4.2	3.6	1.4	1.8	2.2
16	1.4	1.8	2.4	1.8	2.3	2.9	2.2	2.8	3.6	2.9	3.7	4.8	4.1	1.6	2.1	2.5
18	1.6	2.1	2.7	2.1	2.6	3.3	2.5	3.1	4.0	3.3	4.1	5.5	4.7	1.8	2.3	2.8
21	1.9	2.4	3.1	2.4	3.0	3.9	2.8	3.6	4.8	3.9	4.9	6.3	5.5	2.2	2.7	3.2
24	2.2	2.8	3.6	2.8	3.4	4.5	3.3	4.1	5.5	4.4	5.6	7.3	6.2	2.5	3.1	3.7

CS-30

株間 (cm)	条数と横送り回数(回)												PTO検出(POP)			
	4条植え			5条植え			6条植え			8条植え			10条 植え	4条	5条	6条
	16回	20回	26回	16回	20回	26回	16回	20回	26回	16回	20回	26回				
12	1.1	1.5	2.1	1.5	2.0	2.7	1.9	2.5	3.3	2.7	3.4	4.6	3.2	1.2	1.6	1.9
13	1.2	1.7	2.3	1.7	2.2	2.9	2.1	2.7	3.6	2.8	3.7	5.0	3.5	1.3	1.7	2.1
14	1.3	1.8	2.5	1.8	2.4	3.2	2.3	2.9	3.9	3.1	4.0	5.4	3.8	1.4	1.9	2.3
16	1.5	2.2	2.8	2.2	2.8	3.7	2.7	3.4	4.6	3.6	4.7	6.2	4.4	1.7	2.1	2.6
18	1.7	2.5	3.3	2.5	3.1	4.2	3.0	3.9	5.2	4.2	5.4	7.0	5.0	1.9	2.4	2.9
21	2.0	2.9	3.9	2.9	3.7	5.0	3.6	4.6	6.1	5.0	6.2	8.3	5.7	2.3	2.8	3.4
24	2.7	3.4	4.6	3.4	4.4	5.8	4.2	5.4	7.0	5.7	7.2	9.6	6.6	2.6	3.2	3.9

CS-100

株間 (cm)	5条植え	6条植え	8条植え
14	1.9	2.3	3.0
16	2.1	2.6	3.4
18	2.4	2.9	3.9
21	2.8	3.4	4.6
24	3.2	3.9	5.3
30	4.1	5.0	6.6

こまきちゃんmini(クボタ)調整ダイヤルの目安

株間 (cm)	条数と横送り回数(回)			
	4条植え		5条植え	
	20回	26回	20回	26回
14	3.5	4.2	4.2	5.3
16	4.2	4.8	4.8	5.9
18	4.2	5.4	5.4	6.5
21	4.8	5.9	5.9	7.2
24	5.9	7.2	6.5	8.4
28	6.9	8.4	7.8	9.7

こまきちゃん(井関農機)調整ダイヤルの目安

SCS-10

株間 (cm)	条数と横送り回数(回)																					
	4条植え			5条植え			6条植え			7条植え			8条植え									
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28					
14	1.2	1.6	1.2	1.5	1.7	2.1	2.5	1.6	1.9	2.1	2.6	3.1	1.9	2.2	2.5	3.1	3.7	2.3	2.6	2.9	3.6	4.3
16	1.5	1.9	1.5	1.7	2.0	2.5	2.9	1.9	2.2	2.5	3.0	3.6	2.3	2.6	2.9	3.6	4.3	2.7	3.0	3.4	4.2	5.0
18	1.7	2.2	1.7	1.9	2.3	2.8	3.3	2.2	2.5	2.8	3.4	4.1	2.6	2.9	3.3	4.1	4.9	3.0	3.4	3.9	4.8	5.7
22	2.2	2.8	2.2	2.6	2.8	3.5	4.2	2.8	3.1	3.5	4.3	5.1	3.2	3.7	4.2	5.1	6.0	3.8	4.3	4.9	5.9	6.9
23	2.4	2.8	2.4	2.7	3.0	3.7	4.4	2.8	3.3	3.7	4.5	5.4	3.4	3.9	4.4	5.4	6.3	4.0	4.5	5.1	6.1	7.3
26	2.7	3.3	2.7	3.0	3.4	4.2	5.0	3.3	3.8	4.2	5.2	6.1	3.9	4.5	5.0	6.1	7.2	4.6	5.2	5.8	7.0	8.3
30	3.1	3.9	3.1	3.6	4.1	5.0	5.8	3.9	4.4	5.0	6.0	7.1	4.6	5.3	5.8	7.1	8.4	5.4	6.0	6.7	8.2	9.7

SCS-30

株間 (cm)	条数と横送り回数(回)																					
	4条植え			5条植え			6条植え			7条植え			8条植え									
	20	24	16	18	20	24	28	16	18	20	24	28	16	18	20	24	28					
14	1.2	1.4	1.2	1.3	1.5	1.9	2.2	1.4	1.6	1.9	2.3	2.7	1.7	2.0	2.2	2.7	3.0	2.0	2.3	2.5	3.0	3.5
16	1.4	1.7	1.4	1.6	1.8	2.1	2.5	1.7	1.9	2.1	2.6	3.0	2.0	2.3	2.5	3.0	3.5	2.3	2.6	2.8	3.4	4.1
18	1.6	1.9	1.6	1.8	2.0	2.4	2.8	1.9	2.2	2.4	2.9	3.4	2.3	2.6	2.8	3.4	4.0	2.6	2.9	3.2	3.9	4.6
22	2.0	2.4	2.0	2.2	2.5	2.9	3.5	2.4	2.7	2.9	3.6	4.2	2.8	3.1	3.5	4.2	4.9	3.1	3.6	4.0	4.8	5.7
23	2.0	2.5	2.0	2.3	2.6	3.1	3.6	2.5	2.8	3.1	3.7	4.4	2.8	3.2	3.9	4.4	5.2	3.3	3.7	4.2	5.1	5.9
26	2.3	2.8	2.3	2.7	2.9	3.5	4.1	2.8	3.1	3.5	4.3	5.0	3.2	3.7	4.4	5.0	5.8	3.8	4.3	4.8	5.7	6.7
30	2.7	3.2	2.7	3.0	3.4	4.1	4.8	3.2	3.6	4.1	5.0	5.7	3.8	4.3	4.8	5.7	6.8	4.4	5.0	5.5	6.6	7.8

ショキニー[®]1キロ粒剤 田植同時散粒機のダイヤル目安表

表中の数値は、ダイヤルの目盛を示します。なお、本表は目安ですので、実際の散布の際には各機械で確認・調整するよう、お願い致します。

まくべえⅡ／イノベーターⅡ(丸山製作所)調整ダイヤルの目安

MGT-800A/MGT-800B

	株間 (cm)	横送り回数							
		16	18	20	22	24	26	28	30
4条植え	14	3.3	3.4	3.6	3.7	3.8	4.0	4.1	4.2
	16	3.4	3.6	3.8	3.9	4.0	4.2	4.3	4.4
	18	3.6	3.8	3.9	4.1	4.2	4.4	4.5	4.7
	22	3.9	4.1	4.3	4.4	4.6	4.8	4.9	5.1
	26	4.2	4.4	4.6	4.8	5.0	5.2	5.3	5.5
	28	4.3	4.5	4.7	4.9	5.1	5.3	5.5	5.7
	30	4.4	4.7	4.9	5.1	5.3	5.5	5.7	5.9
5条植え	14	3.6	3.7	3.9	4.1	4.2	4.3	4.5	4.6
	16	3.8	3.9	4.1	4.3	4.4	4.6	4.7	4.9
	18	3.9	4.1	4.3	4.5	4.7	4.8	5.0	5.2
	22	4.3	4.5	4.7	4.9	5.1	5.3	5.5	5.7
	26	4.6	4.8	4.8	5.1	5.3	5.5	5.9	6.2
	28	4.7	5.0	5.1	5.5	5.7	5.9	6.2	6.4
	30	4.9	5.2	5.4	5.7	5.9	6.2	6.4	6.6
6条植え	14	3.8	4.0	4.2	4.3	4.5	4.7	4.8	5.0
	16	4.0	4.2	4.4	4.6	4.8	5.0	5.1	5.3
	18	4.2	4.5	4.7	4.9	5.1	5.2	5.4	5.6
	22	4.6	4.9	5.1	5.3	5.5	5.8	6.0	6.2
	26	5.0	5.2	5.5	5.8	6.0	6.3	6.5	6.7
	28	5.1	5.4	5.7	6.0	6.2	6.5	6.7	7.0
	30	5.3	5.6	5.9	6.2	6.5	6.7	7.0	7.2
8条植え	14	4.3	4.5	4.7	4.9	5.1	5.3	5.5	5.7
	16	4.6	4.8	5.0	5.3	5.5	5.7	5.9	6.1
	18	4.8	5.1	5.3	5.5	5.8	6.0	6.2	6.5
	22	5.3	5.5	5.8	6.1	6.4	6.6	6.9	7.1
	26	5.7	6.0	6.3	6.6	6.9	7.2	7.5	7.8
	28	5.9	6.2	6.6	6.9	7.2	7.5	7.8	8.1
	30	6.1	6.5	6.8	7.1	7.5	7.8	8.1	8.3
10条植え	14	4.7	5.0	5.1	5.5	5.7	5.9	6.2	6.4
	16	5.0	5.3	5.6	5.8	6.1	6.3	6.6	6.8
	18	5.3	5.6	5.9	6.2	6.5	6.7	7.0	7.2
	22	5.8	6.2	6.5	6.8	7.1	7.4	7.7	8.0
	26	6.3	6.7	7.1	7.4	7.8	8.1	8.3	8.7
	28	6.6	7.0	7.4	7.7	8.1	8.3	8.8	9.1
	30	6.8	7.2	7.6	8.0	8.3	8.7	9.1	9.4

MGT-500A/MGT-500B

	株間 (cm)	横送り回数					
		16	18	20	22	24	26
4条植え	12	3.7	3.9	3.9	4.1	4.2	4.3
	14	3.9	4.0	4.2	4.3	4.5	4.7
	16	4.0	4.2	4.4	4.6	4.8	5.0
	18	4.2	4.4	4.7	4.9	5.0	5.3
	22	4.6	4.9	5.1	5.4	5.6	5.8
	26	5.0	5.3	5.5	5.8	6.1	6.3
	28	5.1	5.5	5.7	6.0	6.3	6.5
5条植え	12	3.9	4.1	4.3	4.5	4.7	4.8
	14	4.2	4.4	4.6	4.8	5.0	5.2
	16	4.4	4.7	4.9	5.1	5.3	5.5
	18	4.7	4.9	5.2	5.4	5.6	5.9
	22	5.1	5.4	5.7	6.0	6.2	6.5
	26	5.5	5.9	6.2	6.5	6.8	7.0
	28	5.7	6.1	6.4	6.7	7.0	7.3
6条植え	12	4.2	4.4	4.7	4.9	5.0	5.3
	14	4.5	4.8	5.0	5.2	5.5	5.7
	16	4.8	5.0	5.3	5.6	5.8	6.1
	18	5.0	5.4	5.6	5.9	6.2	6.4
	22	5.6	5.9	6.2	6.5	6.8	7.1
	26	6.1	6.4	6.8	7.1	7.4	7.7
	28	6.3	6.6	7.0	7.4	7.7	8.0
8条植え	12	4.8	5.0	5.3	5.6	5.8	6.1
	14	5.1	5.5	5.7	6.0	6.3	6.5
	16	5.5	5.8	6.1	6.5	6.7	6.9
	18	5.8	6.2	6.5	6.8	7.1	7.4
	22	6.5	6.8	7.2	7.5	7.8	8.1
	26	6.9	7.4	7.8	8.1	8.4	8.7
	28	7.2	7.7	8.0	8.4	8.7	9.0
30	7.5	7.9	8.3	8.6	8.9	9.2	

GSシリーズ(共立)調整ダイヤルの目安 ※取扱説明書を参照する場合は、グループB(中)になります。

GS1A/GS2

低速モード

	植付株数(/3.3m ²)			
	40株	50株	60株	70株
4条植え	6.0	5.5	5.0	4.5
5条植え	7.0	6.0	5.5	5.0
6条植え	7.5	6.5	6.0	5.5

中速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
4条植え	7.5	7.0	6.5	6.0	5.5
5条植え	8.5	7.5	7.0	6.5	6.0
6条植え	9.0	8.0	6.5	7.0	6.5

高速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
4条植え	9.0	8.5	8.0	7.5	7.0
5条植え	10.0	9.0	8.5	8.0	7.5
6条植え	10.5	9.5	9.0	8.5	8.0

GS1AW/GS2W

低速モード

	植付株数(/3.3m ²)			
	40株	50株	60株	70株
7条植え	7.0	6.0	5.5	5.0
8条植え	7.5	6.5	6.0	5.5
10条植え	9.0	7.5	7.0	6.0

中速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
7条植え	8.5	7.5	7.0	6.5	6.0
8条植え	9.0	8.0	7.5	7.0	6.5
10条植え	10.5	9.0	8.5	7.5	7.0

高速モード

	植付株数(/3.3m ²)				
	40株	50株	60株	70株	80株
7条植え	10.0	9.0	8.5	8.0	7.5
8条植え	10.5	9.0	9.0	8.5	8.0
10条植え	-	10.5	10.0	9.0	8.5

※ JS-1R、JS-1RW(ヤンマー)はGSシリーズのダイヤル目安を参考にして調整して下さい。

PSRシリーズ(ヤンマー)調整ダイヤルの目安

	植付株数(/3.3m ²)							
	40株	45株	50株	60株	70株	80株	90株	
4条植え	2.7	2.3	2.1	1.7	1.4	1.2	1.0	
5条植え	3.4	3.0	2.7	2.2	1.8	1.6	1.4	
6条植え	4.1	3.6	3.3	2.7	2.2	1.9	1.7	
7条植え	4.9	4.3	3.9	3.2	2.7	2.3	2.0	
8条植え	5.6	5.0	4.4	3.7	3.1	2.7	2.3	

自然に学び自然を守る



(2020-04)